


## Table of Contents

Main Menu .....	1
Add Camera .....	2
Delete Camera .....	3
My Camera List .....	4
Edit Camera .....	5
Streaming .....	6

## Main Screen

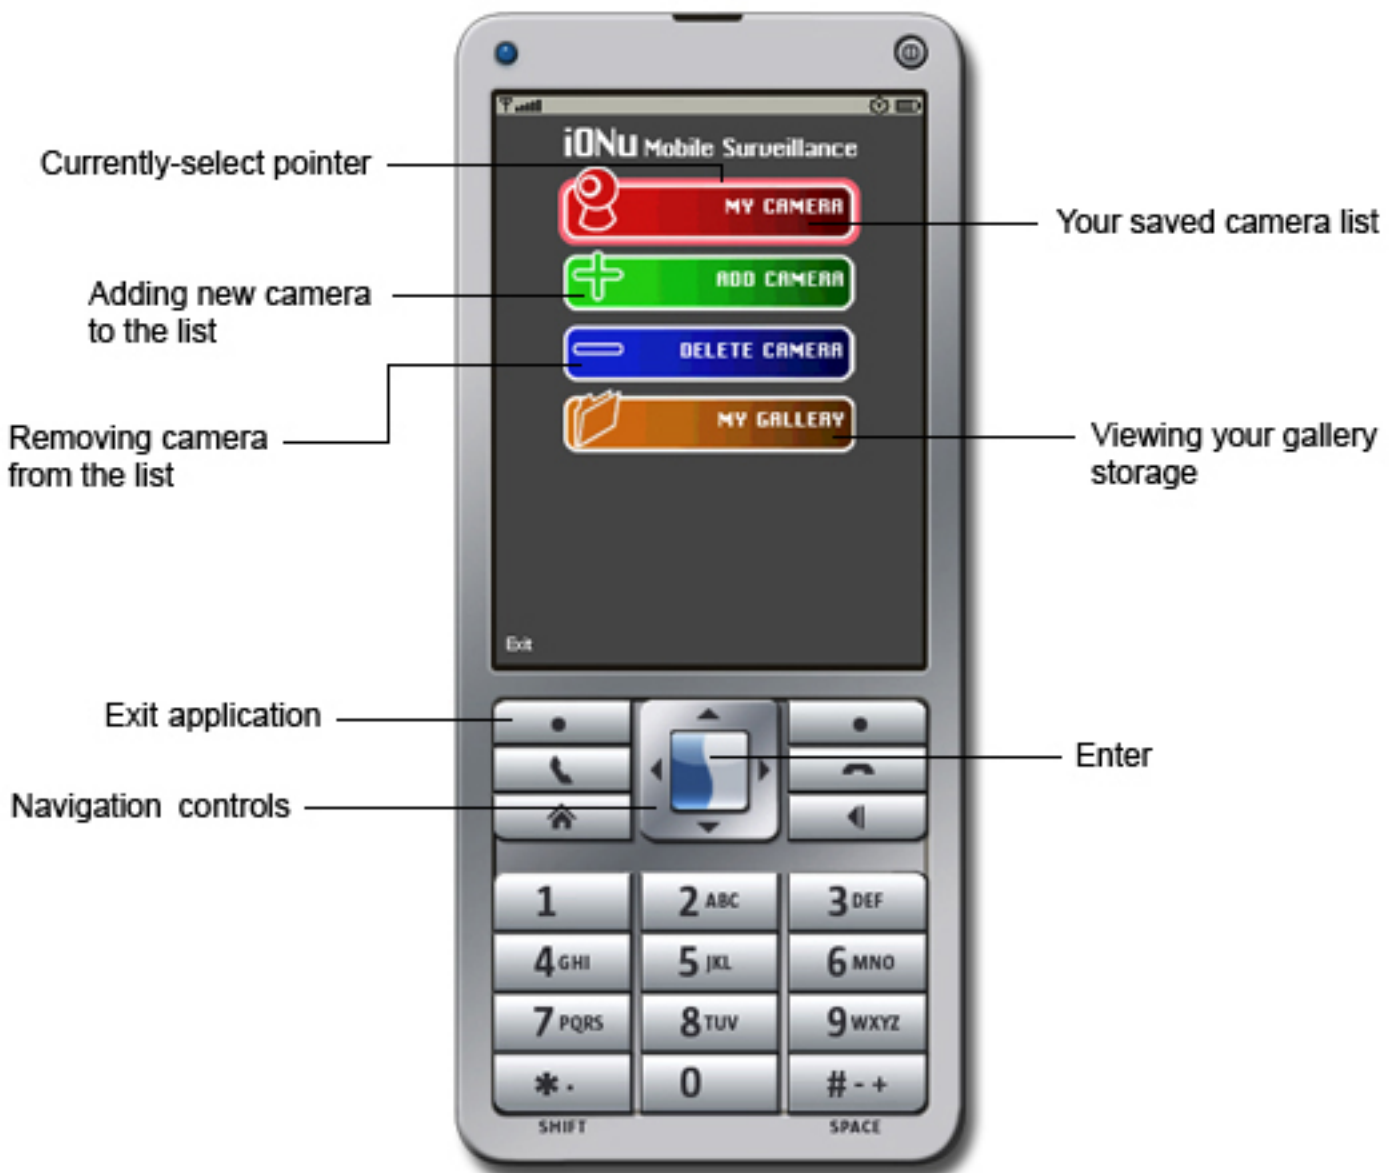

**My Camera:** Accessing your saved list of camera, for editing the setting or view a particular camera in streaming.

**Add Camera:** Adding a new camera to your saved camera list.

**Delete Camera:** Permanently removing a saved camera from your camera list.

**My Gallery:** A storage folder for saved snapshot or video (feature coming soon)

## Add Camera



**Name:** A name for recognition for the camera

**Type:** The brand or type of camera you are using. If you are using "others", you need to know the exact url of how the camera retrieve snapshot.  
i.e. <http://mycam.dyndns.com:8080/cgi-video/picture.jpg?size=1>

**IP:** IP Address of the camera. i.e: 201.124.227.70 (without http://)

**Username & Password:** An authentication to access your camera. This is the same as the username and password the one when logging in through web browser.

**Control:** Enable or disable of pan and tilt control of camera.

**Number:** Camera number in camera system. This will only appear if "FlexWatch" or "iCamView Pro" is chosen. This is to select the camera to be saved from the multi-camera system.

## Delete Camera



**Navigation buttons:** To select the camera you wish to choose.

**Enter button:** To choose the selected camera for deleting. Once pressed, you will be asked a re-confirmation for deleting the camera. Choose "Yes" to proceed, "No" to cancel.

**Left menu button:** To go **BACK** to previous menu

## My Camera List




**Navigation buttons:** To select the camera you wish to choose.

**Enter button:** To choose the selected camera for streaming

**Left menu button:** To go **BACK** to previous menu

**Right menu button:** To **EDIT** the setting of the currently selected camera in the list.


# Edit Camera

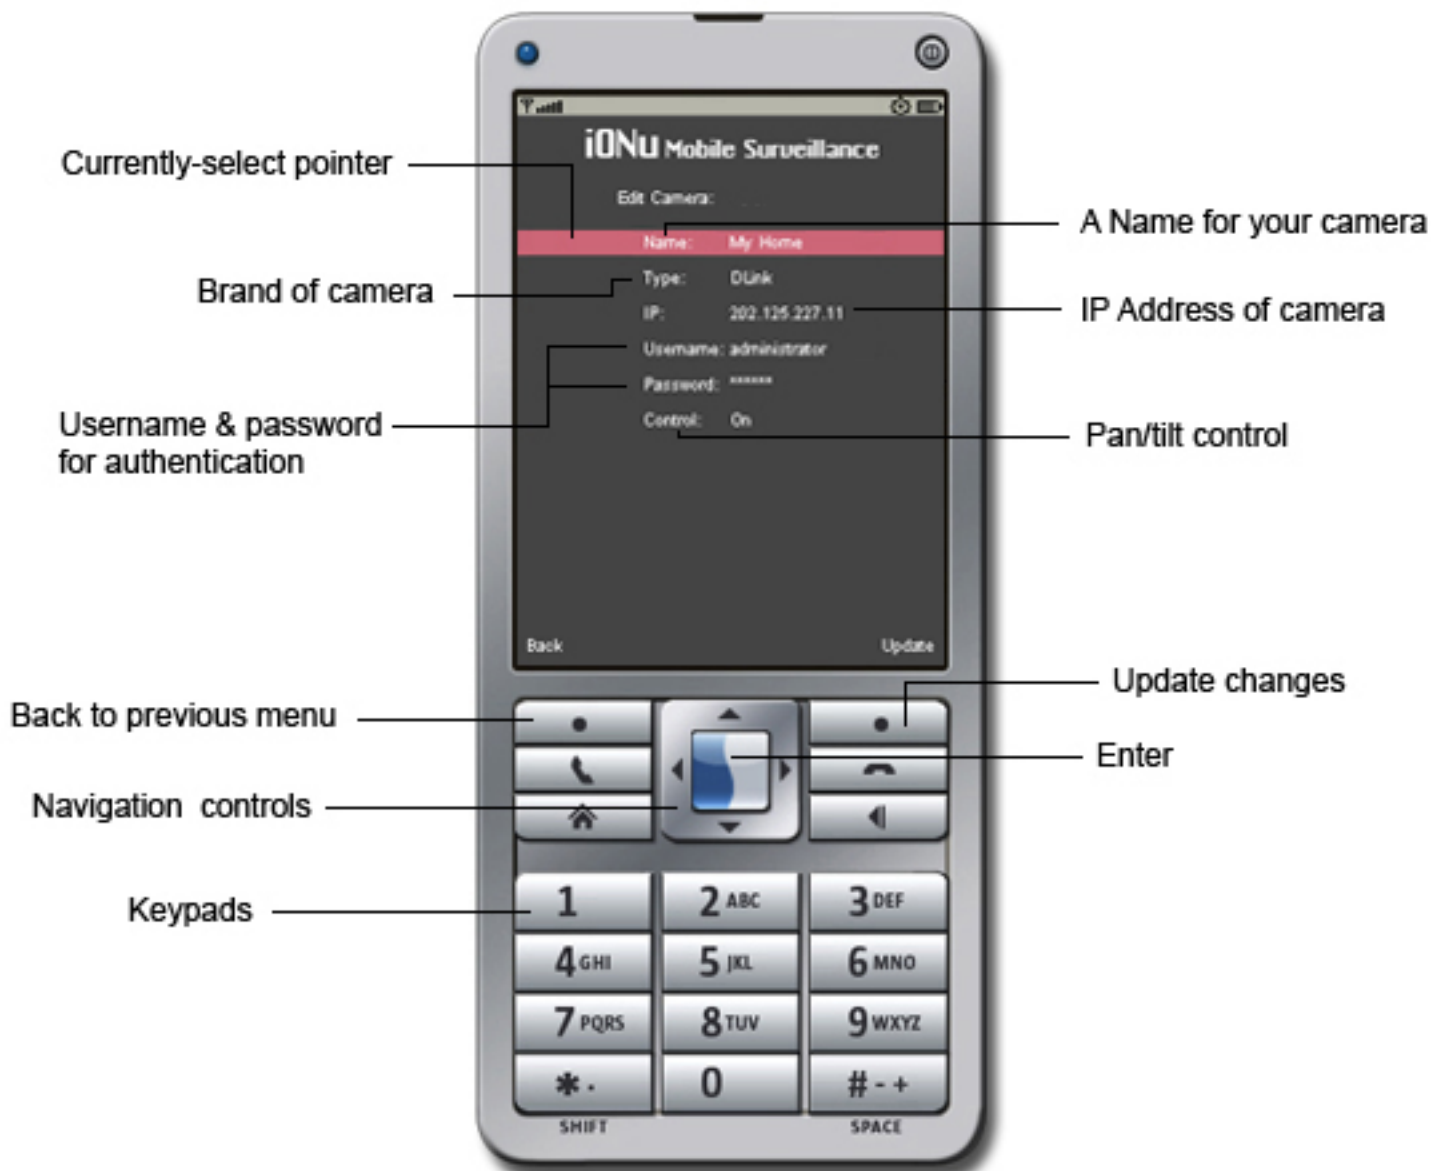

This section is similiar to "Add Camera" feature. Please refer to "Add Camera" section for more input details

**Right menu button:** Once pressed, what-so-ever changes made in the field will be updated in the camera database.

## Streaming Screen

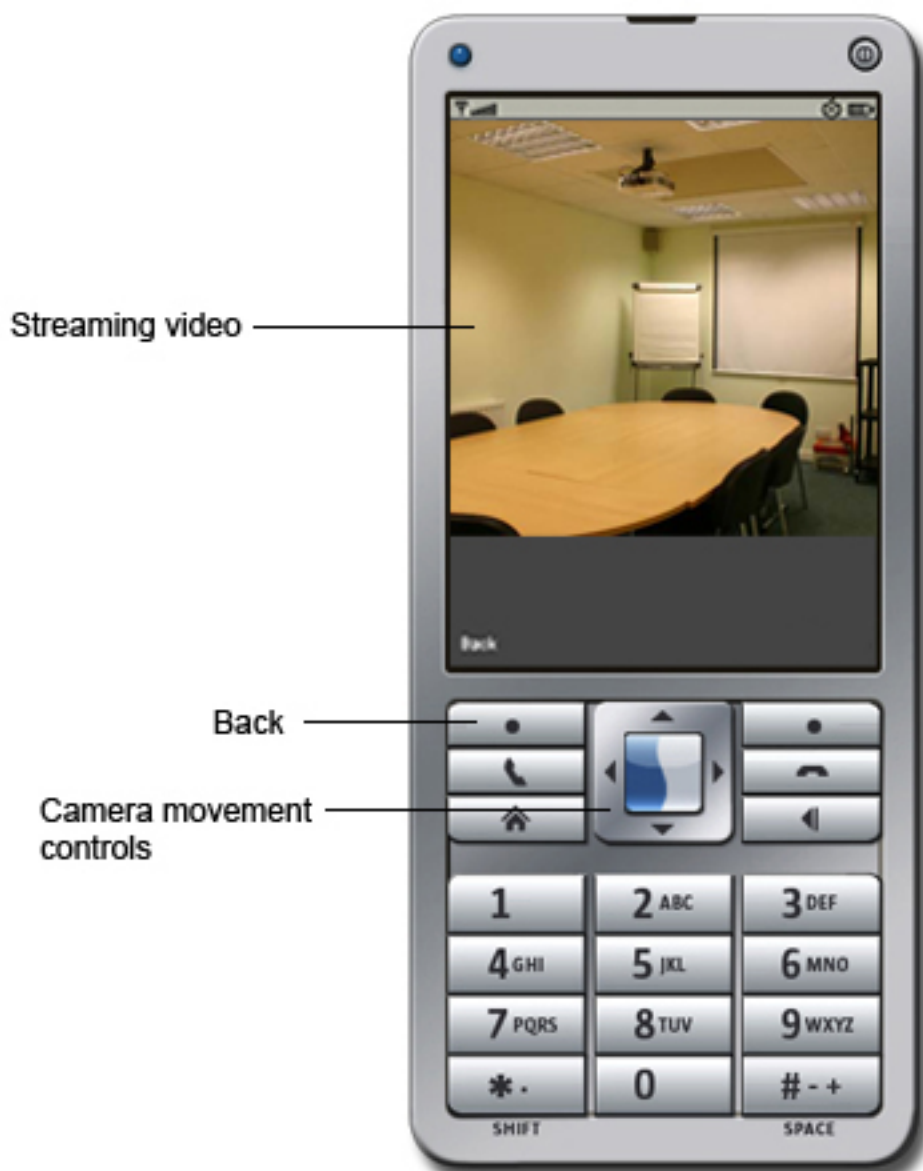

**Direction menu buttons:** For controlling the pan & tilt of camera. (Currently available for Dlnik and iCamView Pro cameras only).

**Left menu button:** To exit streaming and go back to the previous screen.

**\*Note:** Currently snapshot, zoom and size setting of camera is unavailable with this version. To adjust the size, you will have to login via the web browser to do the setting.